



CONCRETE CANVAS[®]

Concrete on a Roll

INSTALLATION GUIDE: SLOPE PROTECTION



The Queen's Awards
for Enterprise:
International Trade
2019



Board of Trade
Winner
2018



Winner
Technical Innovation Award

ice award winner

ICE Wales Cymru Project Awards

Innovation Award
ICE Wales Cymru Awards 2017



British Board of Agrément
Certified



Certified CPD
Provider



Corporate
Member



BRITAIN & NORTHERN IRELAND
Proud Supporter of
Exporting is Great



RAIL



ROAD



MINING



PETROCHEM



AGRO



PUBLIC WORKS



UTILITIES



DEFENSE



DESIGN




SHELTER

1.0 Introduction

1.1 General

Concrete Canvas® (CC) is the original Geosynthetic Cementitious Composite Mat (GCCM) and the first product to declare conformance to ASTM D8364 'Standard Specification for GCCMs'.

CC is a flexible, concrete filled geotextile that hardens on hydration to form a thin, durable and waterproof concrete layer. Essentially, it can be described as *Concrete on a Roll™* and is used for a wide variety of applications including the rapid lining of drainage channels, providing slope protection, weed suppression, culvert repair and general concrete remediation.

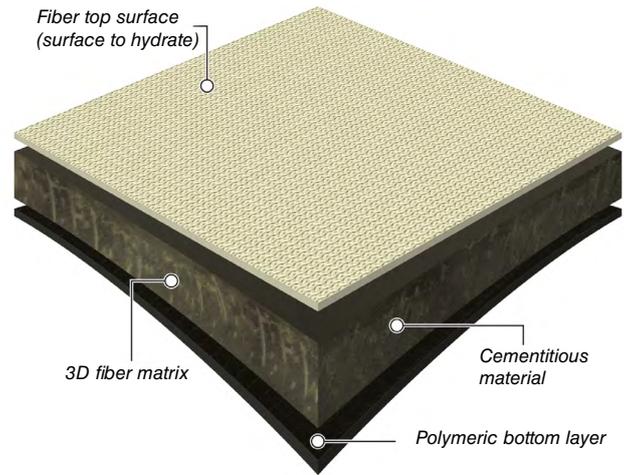

Typical CC cross section

The information contained in this document is provided subject to the General Disclaimer on the last page of this document. A printable copy of the current version of our General Disclaimer is maintained at the following [link](#). Subject to the above, this document provides general guidance procedures for the installation of CC for slope protection, however:

- This installation guidance should be read in conjunction with the construction drawings taking account of the designer's project specifications. **Note that CC is an erosion protection product and is not intended to be used as a structural facing for slope stabilization projects.** Consult the [CC Specification Guide: Slopes](#) for standardized design and installation advice.
- The versatile nature of CC means that this document is not exhaustive and is intended for guidance purposes only. Exceptions to this guideline may be required to address site- specific conditions.
- The performance of the CC is wholly dependent on the quality of its design and installation. It is the installer's responsibility to adhere to these guidelines where applicable and to the project specification and construction drawings.

2.0 Equipment Required

- Sufficient CC to complete the project including allowance for edge anchoring and overlaps
- Suitable lifting equipment to dispense CC Bulk or Wide Rolls
- Safety mask and gloves
- Cutting equipment, utility knife or disc cutter
- Metal or plastic anchor pins
- Lump hammer
- Screwdriver and stainless steel screws or alternative approved method to join the CC layers
- Water supply
- See the [CC Equipment List](#) for full details
- For ordering, offloading and storage information, see the [CC Logistics Guide](#) for full details
- Dust hazard. Wear appropriate PPE. Consult the [CC SDS](#) document




Equipment required

3.0 Substrate Preparation

- Divert water (if lining a slope to an existing watercourse).
- Remove vegetation and grade slope to a uniform profile to suit the design dimensions.
- Remove sharp or protruding rocks >1' and fill large voids.
- If the perimeter edge of the CC is terminating in a soil substrate (i.e. it is not going to be connected to existing infrastructure), excavate crest anchor trenches into the perimeter (crest, toe and sides) of the lined slope. Anchor trench dimensions must be a minimum of 6" x 6" set back at a point determined to be geotechnically stable, but anchor trench dimensions may need to be increased to suit the designer's requirements.
- Consult the construction drawings to verify if special substrate preparation measures such as minimum bearing capacity requirements, installation of a non-woven geotextile, or if substrate drainage details are needed.



Substrate preparation

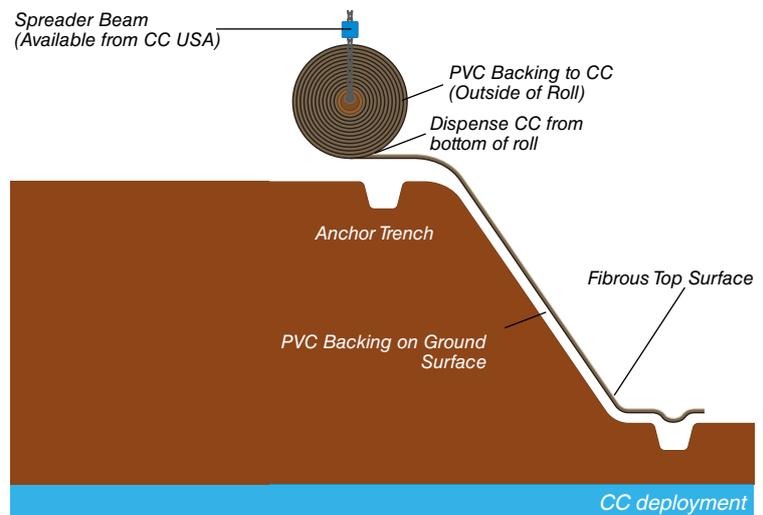

CC deployment

4.0 Deployment

All slopes must be geotechnically stable before deployment of the CC. CC is an erosion control product and not a structural facing for slope stabilization projects.

CC must be placed to ensure direct contact with the surface to prevent void space.

Remove packaging (making sure to note the Roll ID) and unroll CC on the slope to suit specified layup (vertical or horizontal layup as specified on the design drawings), ensuring the fibrous top surface faces upwards, with the PVC membrane in contact with the ground. This is achieved by dispensing the roll by naturally unrolling along the ground rather than pulling material from the top. Avoid snagging the CC on the subgrade. It is important to relax the material to relieve any tension generated in deployment. This can be achieved by lifting the CC layer by hand and repositioning. The installer can adjust the material to remove any wrinkles and ensure the CC conforms to the substrate when hand repositioning.

Personnel must not wear damaging shoes and avoid walking on the CC surface to prevent staining, particularly with wet footwear prior to hydration. On restricted access projects where installers have no option but to walk on CC, the surface can be protected by using timber boards to



Unrolling material using mechanical lifting



Cutting of CC to length

prevent boots from creating depressions in the material. Tuck the edges of the CC into the anchor trenches before cutting to length. When cutting unset CC, a 0.6-0.8" allowance should be left from the cut edge due to potential loss of fill. If cutting with a disc cutter, it is recommended to wet the cut beforehand to minimize dust generation.

Ensure the edge of the first layer of CC is either suitably terminated into existing infrastructure and anchored to prevent water ingress (e.g. using stainless steel clamping bar and gasket), or tucked into an anchor trench which is backfilled to prevent scour beneath the CC.

When positioning subsequent layers, ensure there is at least a 4" overlap and that the material layers are in intimate contact with each other. When lining slopes on watercourses, ensure the overlap is in the direction of water flow (shingled like roof tiles).

Care shall be taken during installation to avoid damage occurring to the CC. Should the CC be damaged during installation and before hydration, the layer should be removed and replaced.

If necessary, the Installer must place temporary ballast, such as sandbags, on top of the laid CC prior to hydration to prevent wind uplift and ensure that it lies flat to the substrate on undulating ground to prevent voids from forming underneath the material.

5.0 Jointing

Verify the specified joint method to be installed.

Ensure there is no rucking at the joint and both layers are in contact with each other.

5.1 For Screwed / Screwed and Sealed joints


- Fold back top layer and hydrate the material under the overlapped sections of the CC. This is important to ensure the joint cures to optimum strength. Once hydrated, the material remains workable for 1 to 2 hours
- If applying a CC approved sealant, apply a 0.3" diameter continuous bead along the line of where the screws will be positioned (eg for a 4" overlap with screws 1.2" from the edge of the top layer, the sealant bead needs to be 2.75" from the edge of the bottom layer)
- Fold the top layer back into position and insert stainless screws at the specified centers (eg 4", 8", 4" Zigzag), at the specified distance from the edge of the CC (eg 1.2", 2", 0.6" & 2")



Overlapping CC



Hydrating under the overlapping CC

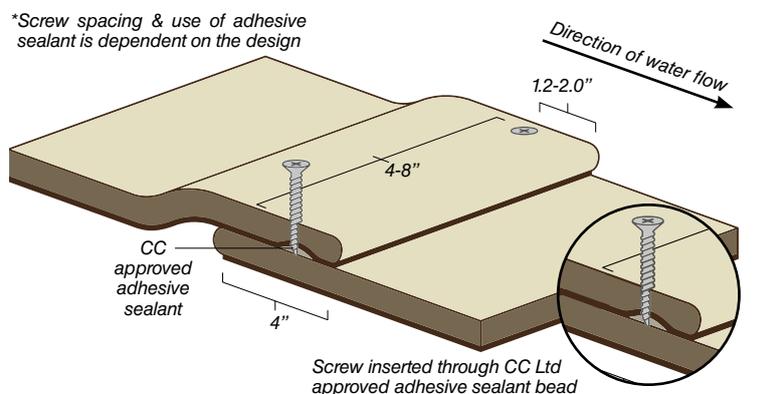

Typical screwed/screwed and sealed overlap joint

5.2 For Thermal Bond joints

- Ensure CC remains dry and unhydrated before jointing
- Follow section 5.0 of the *CC Specification Guide: Slope Protection* for the correct procedure.

6.0 Perimeter Edge Anchoring

It is essential that all exposed (i.e. unjointed) edges of the CC should be secured during the installation to prevent water ingress underneath the CC which may cause wash-out of the substrate and subsequent undermining.


6.1 When anchoring to Soil (i.e. using anchor trenches)

- Position the CC into the anchor trench
- Fix the CC in the anchor trench by inserting anchor pegs through each overlap or at a minimum of 6' intervals for horizontal installations
- The CC should be hydrated before backfilling with non-erodible fill. This may be soil or concrete depending on the design. Consult the construction drawings.


6.2 When anchoring to Concrete/Masonry/Rock

- Consult the construction drawings for the mechanical anchor specifications and anchor spacings.
- Position the CC against the structure and drill a pilot hole through the CC and the structure before inserting the mechanical anchor.
- Use appropriate sealant/gasket and washers/clamping bar as specified by the designer to ensure a strong, watertight seal.


Ensure the leading edge of the final layer of CC is either suitably terminated into existing infrastructure and fixed to prevent water ingress (e.g. using stainless steel clamping bar and gasket), or tucked into an anchor trench which is backfilled to prevent scour beneath CC.

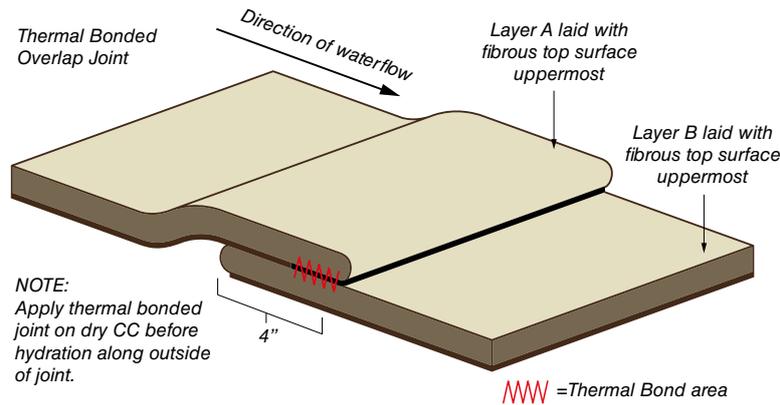

Typical thermal bonded overlap joint

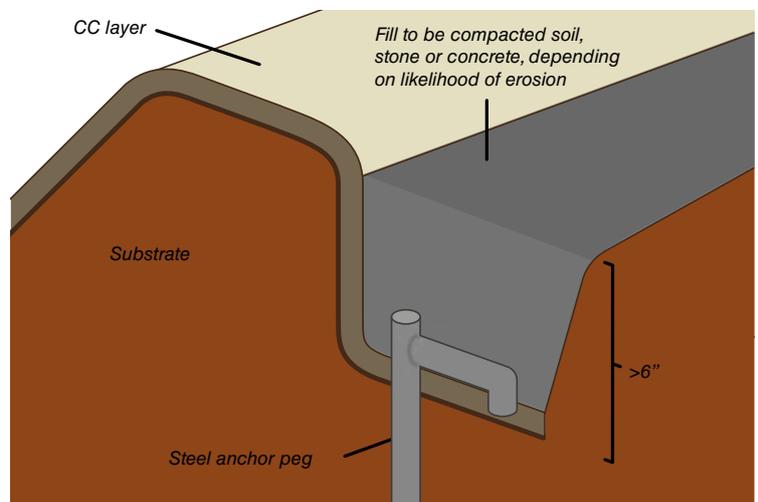

Cross section at crest: pinned & backfilled crest anchor trench

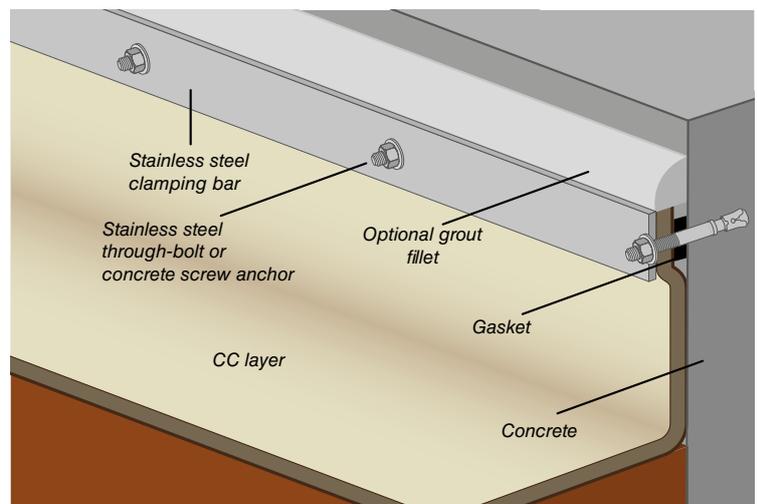


Edge fixing to concrete: clamping bar with neoprene gasket and grout fillet


7.0 Intermediate Anchors

Additional intermediate anchors may be necessary to profile CC on uneven substrates to ensure it conforms to the underlying surface and remove voids, or to resist the following load conditions:

- Hydraulic Shear Loads: e.g. lining slopes on watercourses with a gradient >10%
- Wind Loads: e.g. in exposed locations where slope lengths exceed 23'
- Warmer Climate Detailing: e.g. where CC profile lengths exceed 10'

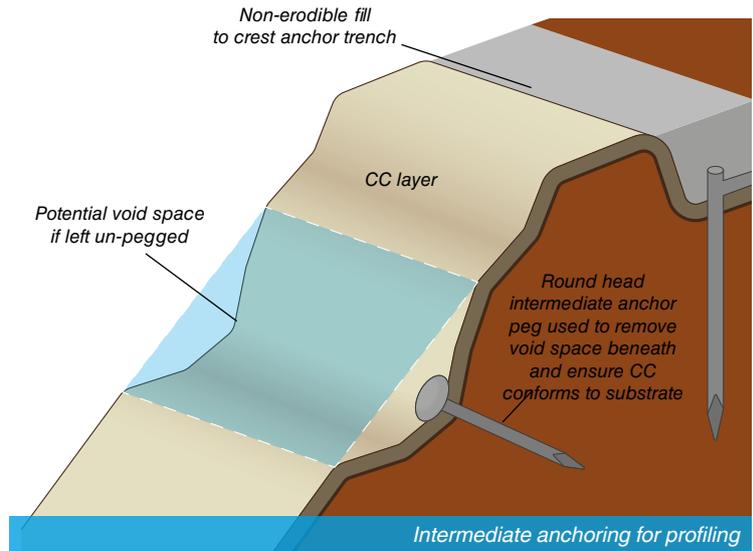

The intermediate anchor type, performance requirements and installation locations should be specified by the designer to suit the anticipated load conditions. 'Round Head' anchor pegs are typically used for profiling and warmer climate detailing. When a greater head plate diameter or pull-out strength is required, for example when designing to resist hydraulic shear, larger intermediate anchors such as Earth Percussion Anchors may be specified.

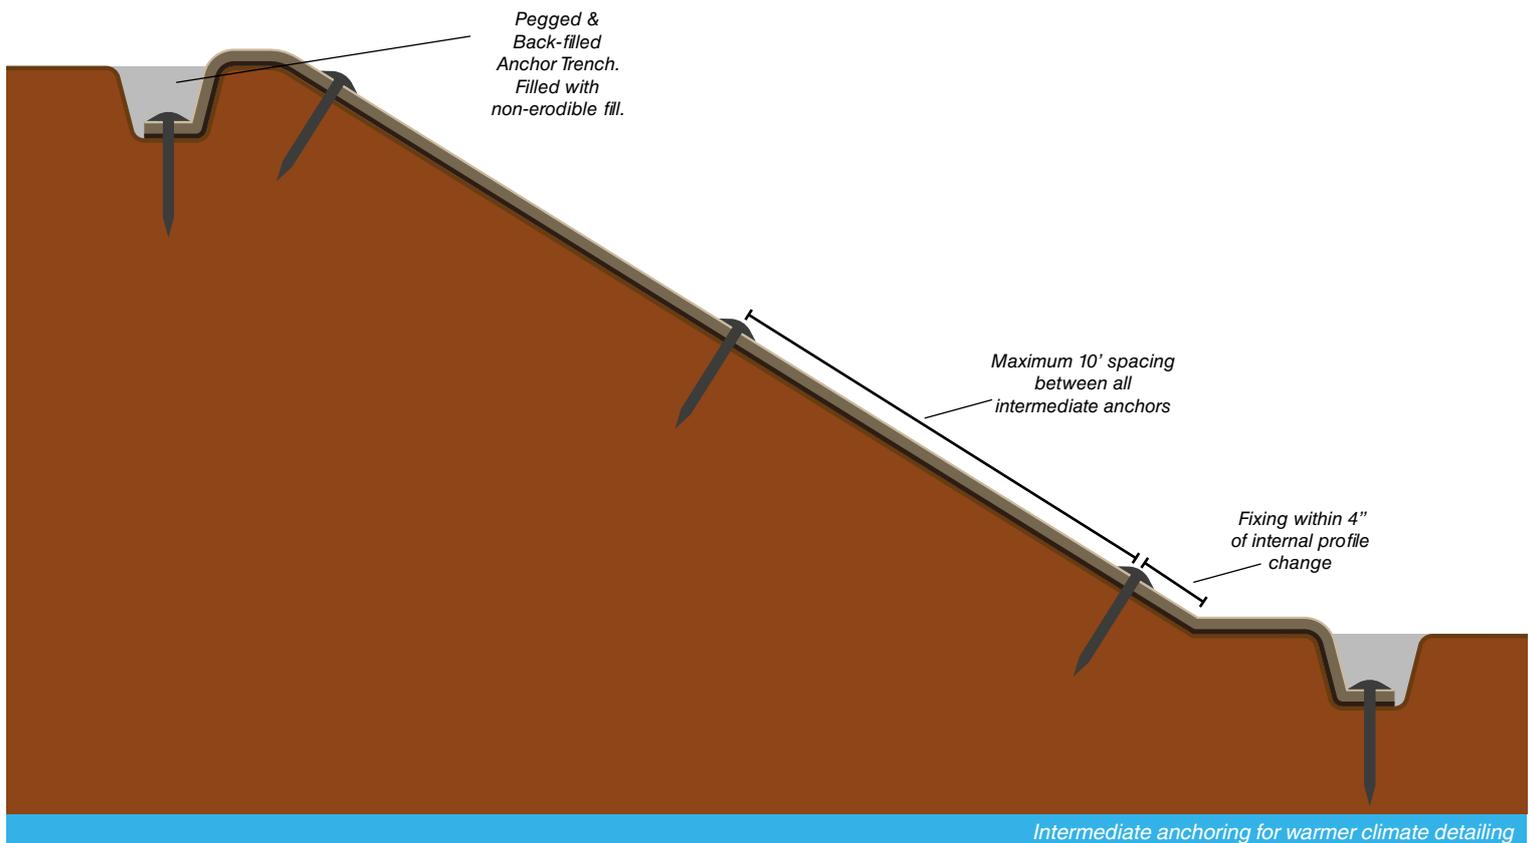

8.0 Custom Detailing

Consult the construction drawings for bespoke detailing such as accommodating pipe penetrations, or the inclusion of CC lined crest drainage channels.

Concrete Canvas USA can provide advice on unforeseen custom details.

9.0 Hydration

After anchoring and jointing, the surface of the CC can be brushed clean to remove marks and debris before spraying with water to hydrate.

Spray the fiber surface multiple times until the CC is fully saturated. The wet CC will first darken and then become lighter as it absorbs the water.

Do not spray high pressure water directly onto the CC as this may wash a channel in the material.

CC can be hydrated using fresh water or salt water, it is not possible to over hydrate CC and it will hydrate and set underwater.

A minimum volume of water equal to 40% of the material weight is required. For example, CCT2™ requires 1.5gal per 10ft².

To check proper hydration, the CC should feel wet to the touch several minutes after hydration. Press your thumb into the CC and release. If water is present in the depression in the CC, it has been sufficiently hydrated. If no water is observed, then more water must be applied.

Specific hydration methods are required in drying conditions (installing in high air temperatures (>72°F), wind (>7.5 mph), strong direct sunlight or low humidity (<70%)) and in low temperature conditions. Please consult the [CC User Guide: Hydration](#) which is also attached on all CC Bulk Rolls.

It is not recommended to rely on rainfall to provide hydration.

10.0 Setting

There is a working time of 1-2 hours after hydration.

Backfill anchor trenches with non-erodible fill as specified in the construction drawings to create a neat termination and encourage surface water runoff to flow over the anchor trench and on to the CC slope.

CC hardens to strength in 24 hours and is then ready for use. Allow the CC to cure for at least 48 hours before applying any post installation surface treatments such as jet washing or painting.



Hydration of CC



Hydration touch test



Ensure adequate hydration, do not rely on rainfall



Backfill anchor trench

11.0 Installation Sequence

Planning of CC installations is necessary to ensure tools and materials (e.g. hydration water) are available when required.

Only install what can be fully jointed, anchored and hydrated before the end of construction day to minimize any adverse effect on the installation and/or performance capabilities of the product.

If installation continues the following working day, protect the edge of the last layer of CC overnight with waterproof sheeting to enable jointing on return to work.

An example install sequence is described below:

- Morning - Deploy CC panels and secure along the perimeter edges.
- Early afternoon - Jointing of panels (e.g. hydrate under-lap, apply sealant, screw joints), install intermediate anchors.
- Late afternoon - Hydration (following drying/low temperature condition guidance as required).

12.0 Inspection, Maintenance and Repair

CC lined structures should be inspected 24 hours after hydration and at regular intervals thereafter. Consult the [CC User Guide: Inspection, Cleaning and Maintenance](#) for more details. For the majority of projects, CC does not require cleaning or maintenance. If damage is found during a periodic inspection, please contact Concrete Canvas USA for repair guidance.



Completed slope installation, Ghana



Completed slope installation, Brunei

General Disclaimer:

The information in this document is provided for general information only as an indication as to the potential use of our products. It does not amount to advice which any person can rely on and it does not form part of any contract. To the fullest extent permitted by law, neither Concrete Canvas Ltd nor any of its officers, employees, consultants or group companies accepts any duty of care and shall not be liable for any loss, damage, cost or expense however arising from any use of, or reliance on, this information.

Subject to the above, the information may assist clients, designers and contractors (including the principal contractor and principal designer) to address their obligations under applicable law. The third party specifier, architects, engineers, designers and/or other contractors for a particular project shall bear the sole responsibility for the determination of the suitability of our products for a particular project or application and the preparation and approval of design, construction and installation plans and instructions therefore, taking into account all associated risks and health & safety implications. By providing this document, neither Concrete Canvas Ltd nor any of its officers, employees, consultants or group companies accepts any appointment to work on any project in the capacity of designer, contractor or otherwise and no legal relationship shall be created thereby.

Patent and trade mark information concerning our products can be found at this [link](#).