



NOTES:  
**THIS IS NOT A CAD PRODUCED  
DRAWING.**  
  
**TO BE USED FOR ILLUSTRATIVE  
PURPOSES ONLY.**

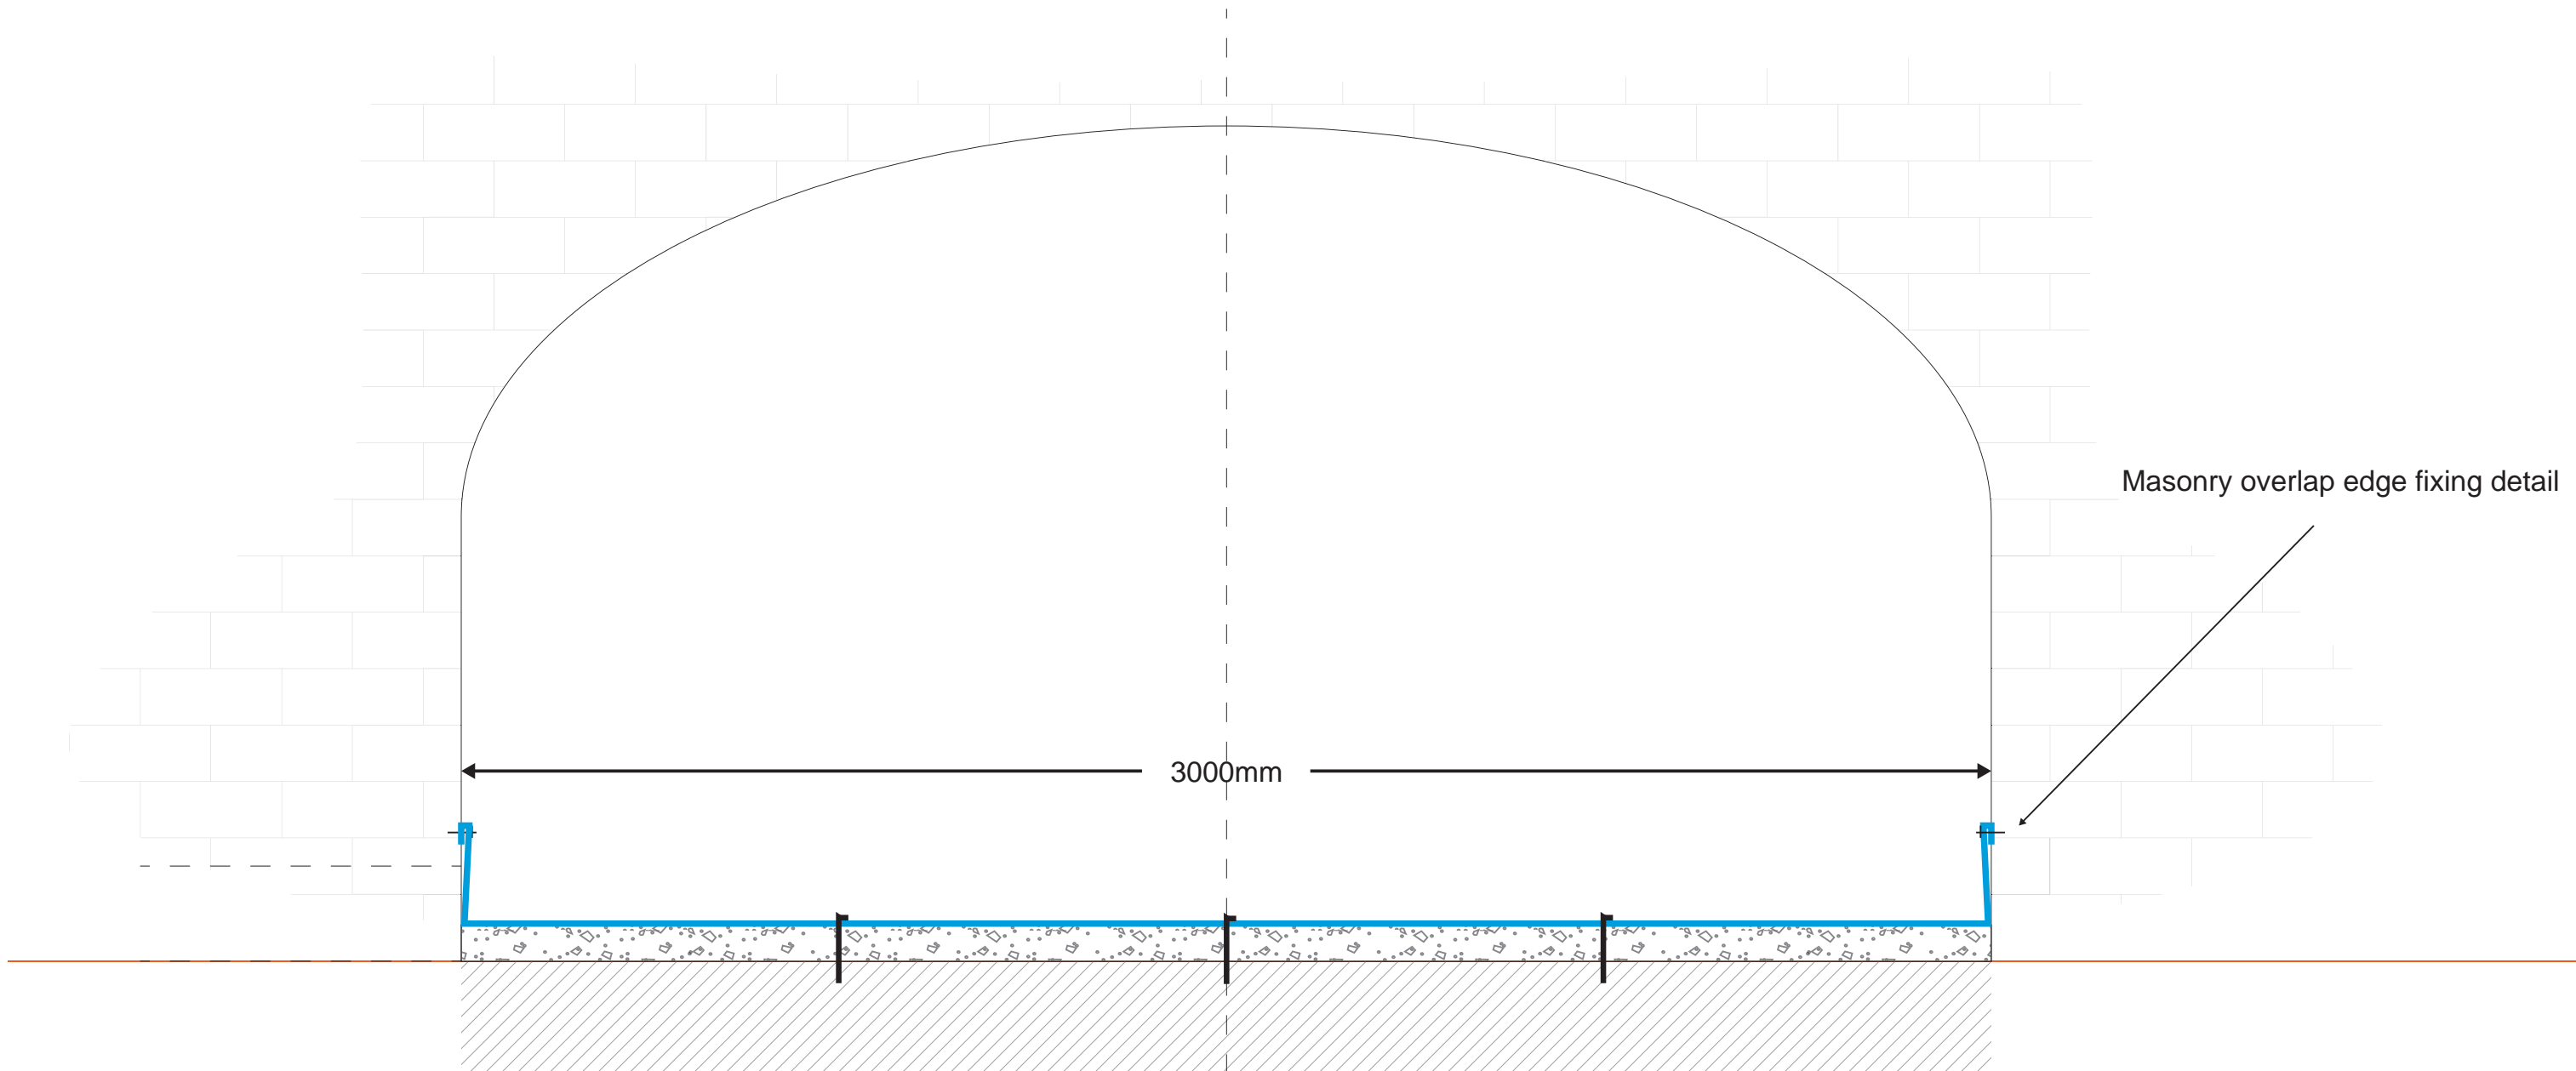

**PLAN VIEW**

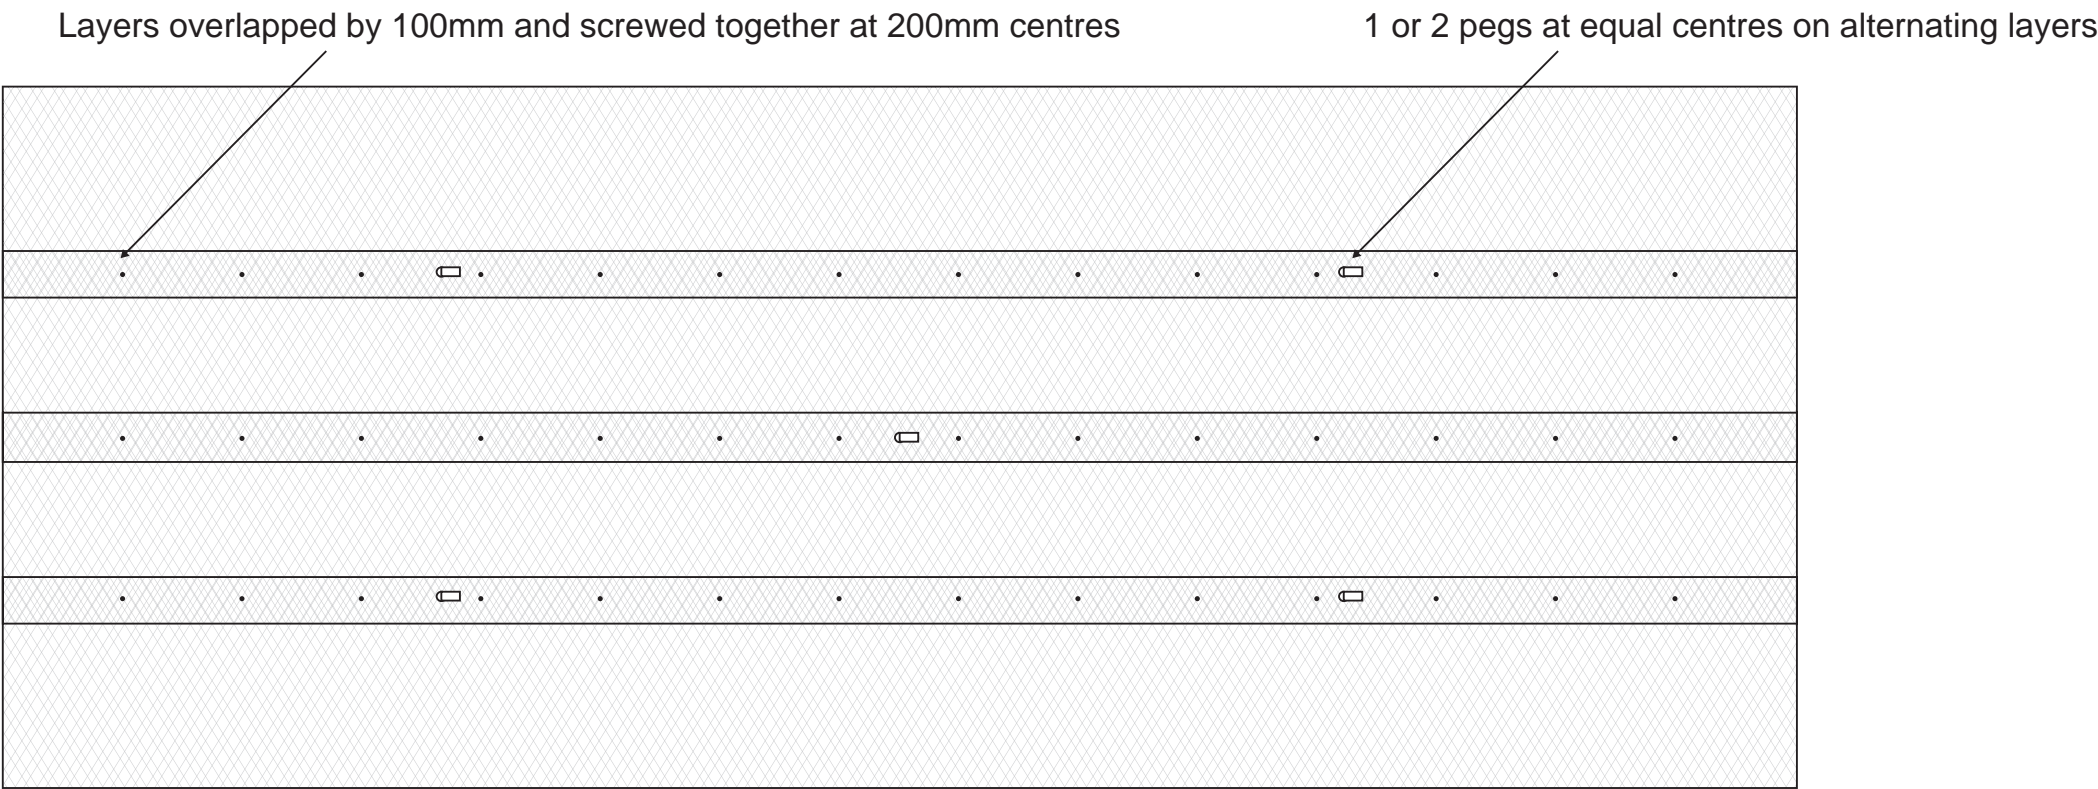

**NOTES**

DRAIN CULVERT PRIOR TO INSTALLATION  
APPLY AGGREGATE LAYER ON BASE  
LAY CC8 TRANSVERSELY ACROSS WIDTH OF CULVERT  
FIX CC INTO MASONRY SIDE WALLS AT APPROX. 150MM LAP USING HILTI FIXINGS WITH >14MM WASHERS - CONTACT HILTI FOR RECOMMENDATION  
FIX CC TO SUBSTRATE USING 380MM PEGS (1 OR 2 PER LAYER THROUGH OVERLAP IN ALTERNATING PATTERN)

LEGEND:

	CC13
	EXISTING SUBSTRATE
	AGGREGATE LAYER

TITLE: <b>CULVERT LINING</b>	
DATE: <b>18/11/2014</b>	VERSION: <b>141118.01</b>
SCALE: <b>NOT TO SCALE.</b>	PRODUCED BY: <b>CONCRETE CANVAS LTD.</b>
<b>CONCRETE CANVAS LTD.</b> UNIT 3, BLOCK A22, SEVERN RD. TREForest INDUSTRIAL ESTATE. PONTYPRIDD, CF375SP UNITED KINGDOM  TEL: +44 (0)845 680 1908 EMAIL: INFO@CONCRETECANVAS.COM	

Please note: As each customer's use of our product may be different, information we provide, including without limitation, recommendations, test results, samples, certificates/processing instructions or marketing claims, is provided in good faith, but without warranty and without accepting any responsibility/liability. Each customer must test and be responsible for its own specific use, further processing, installation, marketing etc. All sales are exclusively subject to our standard terms of sale document, available at [www.concretecanvas.com](http://www.concretecanvas.com). (all additional/different terms are rejected) unless explicitly agreed otherwise in a signed writing.